



1950 Deluxe Parts

ITEM #	DESCRIPTION	PRICE EA	QUANTITY
1	Top Marquee		
2	Back Mural		
3	Strike Up The Band screen		
4	Hit Tune Of The Week screen		
5	Custom made lower screens		
6	Cast CC Stand set of 4		
7	Cast CC Stand Each		
8	NBC Microphone		
9	Cast Horn		
10	Cast Sax		
11	Cast Violin		
12	Trombone		
13	Cast Stand Up Base		
14	Cast large Drum		
15	Large Drum Red Balls		
16	Cast Small Drum		
17	Cast Drum white cover		
18	Cast Piano		
19	Cabinet Side Casting set		
20	Drapery Arm 3 piece assy.		
21	Motor shaft bracket		
22	Motor mounting bracket		
23	Motor off set bracket		
24	Standard Puppet set with Singer		
25	Standard Puppet set 7 piece		
26	Standard Singer puppet		
27	Single replacement puppet		



1950 Deluxe

ITEM #	DESCRIPTION	PRICE EA	QUANTITY
28	Cowboy Puppet set with Singer		
29	Cowboy Puppet set 7 piece		
30	Cowboy Singer puppet		
31	White Cowboy hat		
32	Black Cowboy hat		
33	CUSTOM PAINTED PUPPETS		
34	Base puppet support bracket		
35	Cabinet "Z" support bracket		
36	Cabinet top support rod		
37	Back door hinge		
38	Rear door latch assy.		
39	Rear door catch bracket		
40	Rear door bottom "L" bracket		
41	Top back cabinet bracket		
42	Top light valance assy.		
43	Top light valance plastic		
44	Pilaster plastic set		
45	Side castings plastic set		
46	Stage plastic set		
47	CC Casting plastic set		
48	Speaker screen		
49	Cabinet trim strip set		
50	Stage trim set		
51	Wood Back Door		
52	Complete New Cabinet		
53	Drapery set		
200	Complete lower mech. frame assy.		
201	Main mech. drive assy.		
202	3/8" hub coupling		
203	5/16" hub coupling		



1950 Deluxe

ITEM #	DESCRIPTION	PRICE EA	QUANTITY
204	Rubber coupling cross		
205	Small Gear Shaft Assy.		
206	Small gear		
207	Worm gear		
208	Piano cam lobe		
209	Drummer cam lobe		
210	Base cam lobe		
211	Base "L" bracket		
212	Base rod		
213	Base bow cam		
214	Violin arm rod		
215	Piano sway arm		
216	Piano sway arm bracket		
217	Piano composite wheel		
218	Drummer cam to Base head rod		
219	Violin arm to Base cam rod		
220	Trumpet / Horn player rod		
221	Gear pin to Drum. cam rod		
222	Gear pin to Cross bar rod		
223	Base spring rod assy.		
224	Base cam to Rocker arm rod		
225	Piano Head cam to Cross bar rod		
226	Base Head to Drummer cam rod		
227	Cross to Trumpet / Horn rod		
228	Base cam to Drum. cam rod		
229	Base cam to Violin cam rod		
230	Singer to Piano cam rod		
231	Violin Bow		
232	Base Bow		
233	Drummer Rod Assy.		



1950 Deluxe

ITEM #	DESCRIPTION	PRICE EA	QUANTITY
234	Drummer "U" Bracket		
235	Drummer composite wheel		
236	Drummer wheel Flat bracket		
237	Drummer wheel spring		
238	Sax & Trumpet 1/4" spec. Bolts		
239	Sax & Trumpet Flat bar (2req.)		
240	Sax & Trumpet rocker bar		
241	Base rocker wheel bracket		
242	Cross bar mounting bolt		
243	Cross bar		
244	Base player head cam		
245	Violin arm cam		
246	Drummer rod cam		
247	Singer cam		
248	Trombone seat swivel bracket assy.		
249	Drummer support bracket assy.		
250	Motor grommets & inserts		
251	1/8" collar		
252	5/16" collar		
253	Base cam swivel rod assy.		
254	Base main shaft cam		
258	Other Mech parts		
300	Drapery motor		
301	Mech. motor		
302	W lamp socket W/bracket		
303	Florescent lamp conversion kit each		
304	Florescent ballast		
305	Florescent starter		
306	Florescent starter socket		
307	Florescent lamp tombstone		



1950 Deluxe

ITEM #	DESCRIPTION	PRICE EA	QUANTITY
308	Florescent lamp amber sleeve		
309	Florescent lamp red sleeve		
310	Original 30 Volt transformer		
311	Original 30 Volt relay		
312	24 Volt transformer		
313	24 Volt relay		
314	24 Volt relay base		
315	1/4" fuse holder		
316	In line drapery switch		
317	Original 5 pin socket		
318	Original 5 pin plug		
319	8 pin socket		
320	8 pin plug		
321	Wurlitzer 24 play switchassy.		
322	10" speaker 35 Watt		
323	Luma lamp 60 Watt		
324	Luma lamp end cap		
325	Luma lamp socket		
326	DPDT drapery switch		
327	SPDT drapery switch		
328	Original drapery switches		