



New Band Box Parts

ITEM #	DESCRIPTION	PRICE EA	QUANTITY
1	Top Marquee		
2	Back Mural		
3	Strike Up The Band screen		
4	Hit Tune Of The Week screen		
5	Custom made lower screens		
6	Cast CC Stand set		
7	Cast CC Stand		
8	NBC Microphone		
9	Cast Horn		
10	Cast Sx		
11	Cast Violin		
12	Trombone		
13	Cast Stand Up Base		
14	Cast large Drum		
15	Large Drum Red Balls		
16	Cast Small Drum		
17	Cast Drum white cover		
18	Cabinet Side Casting set		
19	Cast Piano		
20	Drapery Arm 3 piece assy.		
21	Drapery guide rod		
22	Center guide rod support		
23	Motor shaft bracket		
24	Motor mounting bracket		
25	Motor off set bracket		
26	Standard Puppet set with Singer		



New Band Box

ITEM #	DESCRIPTION	PRICE EA	QUANTITY
27	Standard Puppet set 7 piece		
28	Standard Singer puppet		
29	Single replacement puppet		
30	Cowboy Puppet set with Singer		
31	Cowboy Puppet set 7 piece		
32	Cowboy Singer puppet		
33	White Cowboy hat		
34	Black Cowboy hat		
35	CUSTOM PAINTED PUPPETS		
36	Base puppet support bracket		
37	Cabinet "Z" support bracket		
38	Cabinet top support rod		
39	Back door hinge		
40	Rear door latch assy.		
41	Rear door catch bracket		
42	Rear door bottom "L" bracket		
43	Top back cabinet bracket		
44	Top light valance assy.		
45	Top light valance plastic		
46	Pilaster plastic set		
47	CC stand plastic set		
48	Side castings plastic set		
49	Stage plastic set		
50	Speaker screen		
51	Cabinet trim strip set		
52	Stage trim set		
53	Drapery set		
200	Complete lower mech. frame assy.		
201	Main mech. drive assy.		



New Band Box

ITEM #	DESCRIPTION	PRICE EA	QUANTITY
202	3/8" hub coupling		
203	5/16" hub coupling		
204	Rubber coupling cross		
205	Small Gear Shaft Assy.		
206	Small gear		
207	Worm gear		
208	Piano cam lobe		
209	Drummer cam lobe		
210	Base cam lobe		
211	Base "L" bracket		
212	Base rod		
213	Base bow cam		
214	Violin arm rod		
215	Piano sway arm		
216	Piano sway arm bracket		
217	Piano composite wheel		
218	Drummer cam to Base head rod		
219	Violin arm to Base cam rod		
220	Trumpet / Horn player rod		
221	Gear pin to Drum. cam rod		
222	Gear pin to Cross bar rod		
223	Base spring rod assy.		
224	Base cam to Rocker arm rod		
225	Piano Head cam to Cross bar rod		
226	Base Head to Drummer cam rod		
227	Cross to Trumpet / Horn rod		
228	Base cam to Drum. cam rod		
229	Base cam to Violin cam rod		
230	Singer to Piano cam rod		



New Band Box

ITEM #	DESCRIPTION	PRICE EA	QUANTITY
231	Violin Bow		
232	Base Bow		
233	Drummer Rod Assy.		
234	Drummer "U" Bracket		
235	Drummer composite wheel		
236	Drummer wheel Flat bracket		
237	Drummer wheel spring		
238	Sax & Trumpet 1/4" spec. Bolts		
239	Sax & Trumpet Flat bar 2 req.		
240	Sax & Trumpet rocker bar		
241	Base rocker wheel bracket		
242	Cross bar Mounting bolt		
243	Cross bar		
244	Base player head cam		
245	Violin arm cam		
246	Drummer rod cam		
247	Base bow cam		
248	Piano Player head cam		
249	Singer cam		
250	Trombone seat bracket assy.		
251	Drummer support bracket assy.		
252	Motor grommets & inserts		
253	1/8" collar		
254	5/16" collar		
258	Other Mech parts		
300	Drapery motor		
301	Mech. motor		
302	60 W lamp socket W/bracket		
303	15 W Florescent lamp		
304	Florescent ballast		



New Band Box

ITEM #	DESCRIPTION	PRICE EA	QUANTITY
305	Florescent starter		
306	Florescent starter socket		
307	Florescent lamp tombstone		
308	24 Volt transformer		
309	24 Volt relay		
310	24 Volt relay base		
311	1/4" fuse holder		
312	In line drapery switch		
313	8 pin socket		
314	8 pin plug		
315	Wurlitzer 24 play switch assy.		
316	10" speaker 35 Watt		
317	DPDT drapery switch		
318	SPDT drapery switch		