



1952 Standard Parts

ITEM #	DESCRIPTION	PRICE EA	QUANTITY
1	Top Marquee		
2	Back Mural		
3	Strike Up The Band screen		
4	Hit Tune Of The Week screen		
5	Custom made lower screens		
6	Cast CC Stand set of 4		
7	Cast CC Stand Each		
8	NBC Microphone		
9	Cast Horn		
10	Cast Sax		
11	Cast Violin		
12	Trombone		
13	Wood Stand Up Base		
14	Metal large Drum		
15	Large Drum Red Balls		
16	Metal Small Drum		
17	Metal Piano		
18	Cabinet Side Casting set		
19	Drapery Arm 3 piece assy.		
20	Motor shaft bracket		
21	Motor mounting bracket		
22	Motor off set bracket		
23	Standard Puppet set with Singer		
24	Standard Puppet set 7 piece		
25	Standard Singer puppet		
26	Single replacement puppet		



1952 Standard

ITEM #	DESCRIPTION	PRICE EA	QUANTITY
27	Cowboy Puppet set with Singer		
28	Cowboy Puppet set 7 piece		
29	Cowboy Singer puppet		
30	White Cowboy hat		
31	Black Cowboy hat		
32	CUSTOM PAINTED PUPPETS		
33	Base puppet support bracket		
34	Cabinet "Z" support bracket		
35	Cabinet top support rod		
36	Back door hinge		
37	Rear door latch assy.		
38	Rear door catch bracket		
39	Rear door bottom "L" bracket		
40	Top back cabinet bracket		
41	Top light valance assy.		
42	Top light valance plastic		
43	Pilaster plastic set		
44	Side castings plastic set		
45	Stage plastic set		
46	CC stand plastic set		
47	Speaker screen		
48	Cabinet trim strip set		
49	Stage trim set		
50	Wood Back Door		
51	Complete New Cabinet		
52	Drapery set		
200	Complete lower mech. frame assy.		
201	Main mech. drive assy.		
202	3/8" hub coupling		
203	5/16" hub coupling		



1952 Standard

ITEM #	DESCRIPTION	PRICE EA	QUANTITY
204	Rubber coupling cross		
205	Small Gear Shaft Assy.		
206	Small gear		
207	Worm gear		
208	Piano cam lobe		
209	Drummer cam lobe		
210	Base cam lobe		
211	Base "L" bracket		
212	Base rod		
213	Base bow cam		
214	Violin arm rod		
215	Piano sway arm		
216	Piano sway arm bracket		
217	Piano composite wheel		
218	Drummer cam to Base head rod		
219	Violin arm to Base cam rod		
220	Trumpet / Horn player rod		
221	Gear pin to Drum. cam rod		
222	Gear pin to Cross bar rod		
223	Base spring rod assy.		
224	Base cam to Rocker arm rod		
225	Piano Head cam to Cross bar rod		
226	Base Head to Drummer cam rod		
227	Cross to Trumpet / Horn rod		
228	Base cam to Drum. cam rod		
229	Base cam to Violin cam rod		
230	Singer to Piano cam rod		
231	Violin Bow		
232	Base Bow		
233	Drummer Rod Assy.		



1952 Standard

ITEM #	DESCRIPTION	PRICE EA	QUANTITY
234	Drummer "U" Bracket		
235	Drummer composite wheel		
236	Drummer wheel Flat bracket		
237	Drummer wheel spring		
238	Sax & Trumpet 1/4" spec. Bolts		
239	Sax & Trumpet Flat bar 2 req.		
240	Sax & Trumpet rocker bar		
241	Base rocker wheel bracket		
242	Cross bar mounting bolt		
243	Cross bar		
244	Base player head cam		
245	Violin arm cam		
246	Drummer rod cam		
247	Base bow cam		
248	Piano head player cam		
249	Singer cam		
250	Trombone seat bracket assy.		
251	Drummer support bracket assy.		
252	Motor grommets & inserts		
253	1/8" collar		
254	5/16" collar		
256	Other Mech parts		
300	Drapery motor		
301	Mech. motor		
302	60 W lamp socket W/bracket		
303	Florescent lamp conversion kit each		
304	Florescent ballast		
305	Florescent starter		
306	Florescent starter socket		
307	Florescent lamp tombstone		



1952 Standard

ITEM #	DESCRIPTION	PRICE EA	QUANTITY
308	Florescent lamp amber sleeve		
309	Florescent lamp red sleeve		
310	Original 30 Volt transformer		
311	Original 30 Volt relay		
312	24 Volt transformer		
313	24 Volt relay		
314	24 Volt relay base		
315	1/4" fuse holder		
316	In line drapery switch		
317	Original 5 pin socket		
318	Original 5 pin plug		
319	8 pin socket		
320	8 pin plug		
321	Wurlitzer 24 play switch assy.		
322	10" speaker 35 Watt		
323	Luma lamp 60 Watt		
324	Luma lamp end cap		
325	Luma lamp socket		
326	DPDT drapery switch		
327	SPDT drapery switch		
328	Original drapery switches		